


Fire Fighting Intercom System Reference Index

<u>System</u>	<u>Page</u>
1) Standalone Fire Fighting Intercom System	1
(For installations without an Autodialler System; can be for MRL Lifts)	
2) Fire Fighting + AD1000EN-1R & AD1000EN-3R	2
(For installations with AD1000EN-1R or AD1000EN-3R Autodialller System; can be for MRL Lifts)	
3) Fire Fighting + Standard AD1000EN-4R	3 & 4
(For installations with a Standard AD1000EN-4R Autodialller System)	
4) Fire Fighting + MRL AD1000EN-4R	5 & 6
(For installations with an AD1000EN-4R MRL Autodialller System)	

Use Screened and Twisted cable to minimize the electrical noise.

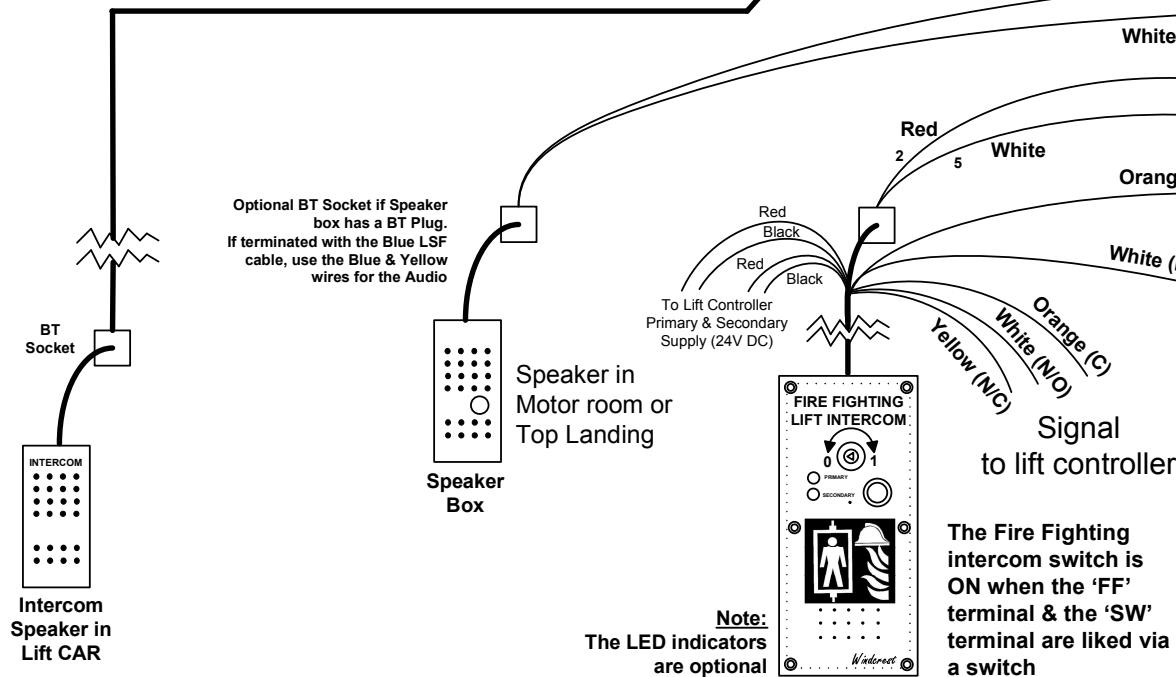

CARD	
CARS	
C	
MRD	
MRS	
M	
L/S	
L	
FF	
-	
N	
SW	
R	
VOP	
BATT	
+/-	
A	
C	

IT/D
IT/S
P

ENINP Board (Inside Fire Fighting Intercom System)

All other unconnected terminals shown, may be pre-wired

Power supply for the unit may be from a Battery backed Power supply or from using a Transformer supplied.


Wiring of the Standalone Fire Fighting Intercom System


Drawing: Standalone FF
Page: 1/6

Date: 02/04/08

Windcrest

Tel: 0208 795 0333
Fax: 0208 795 0444

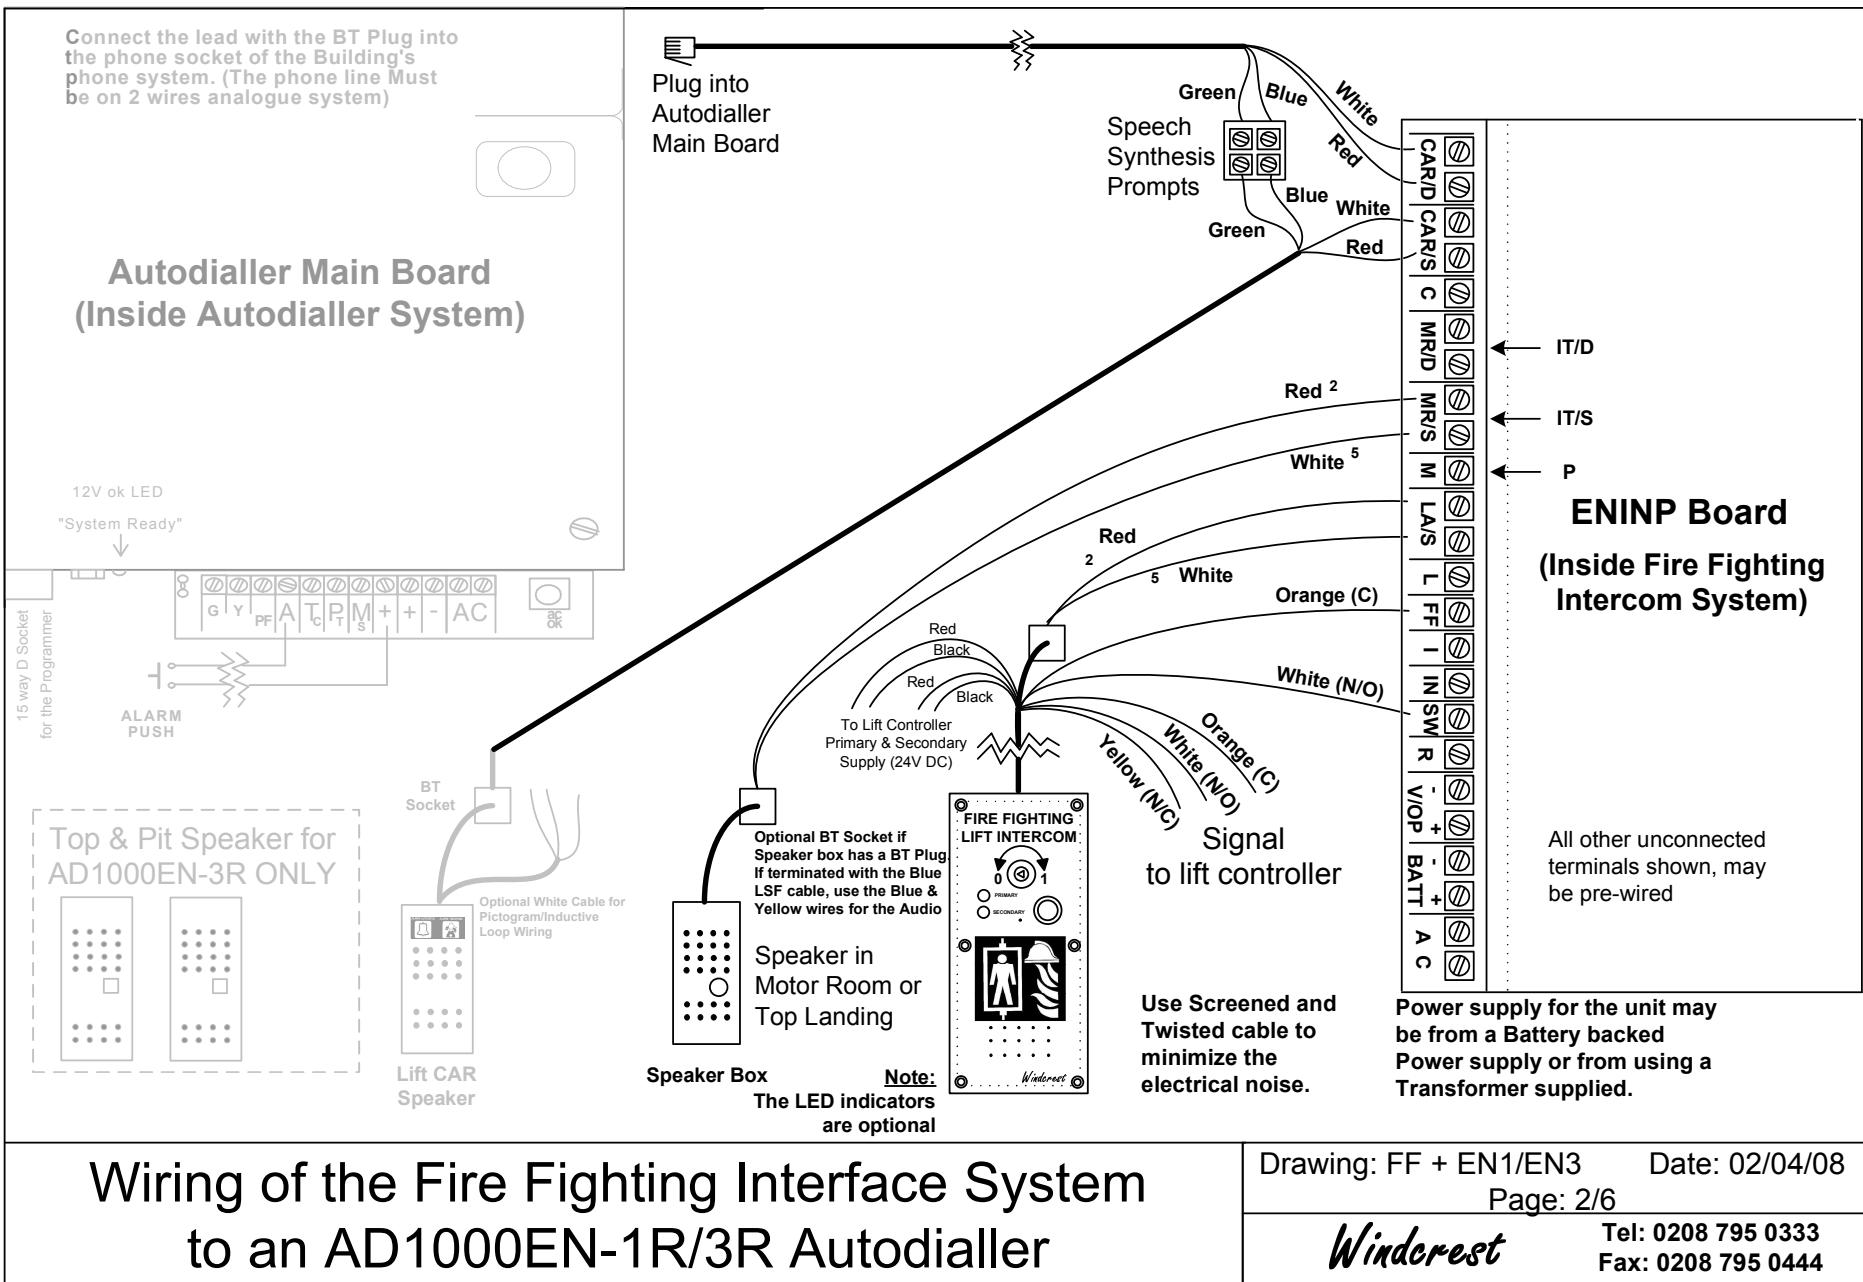

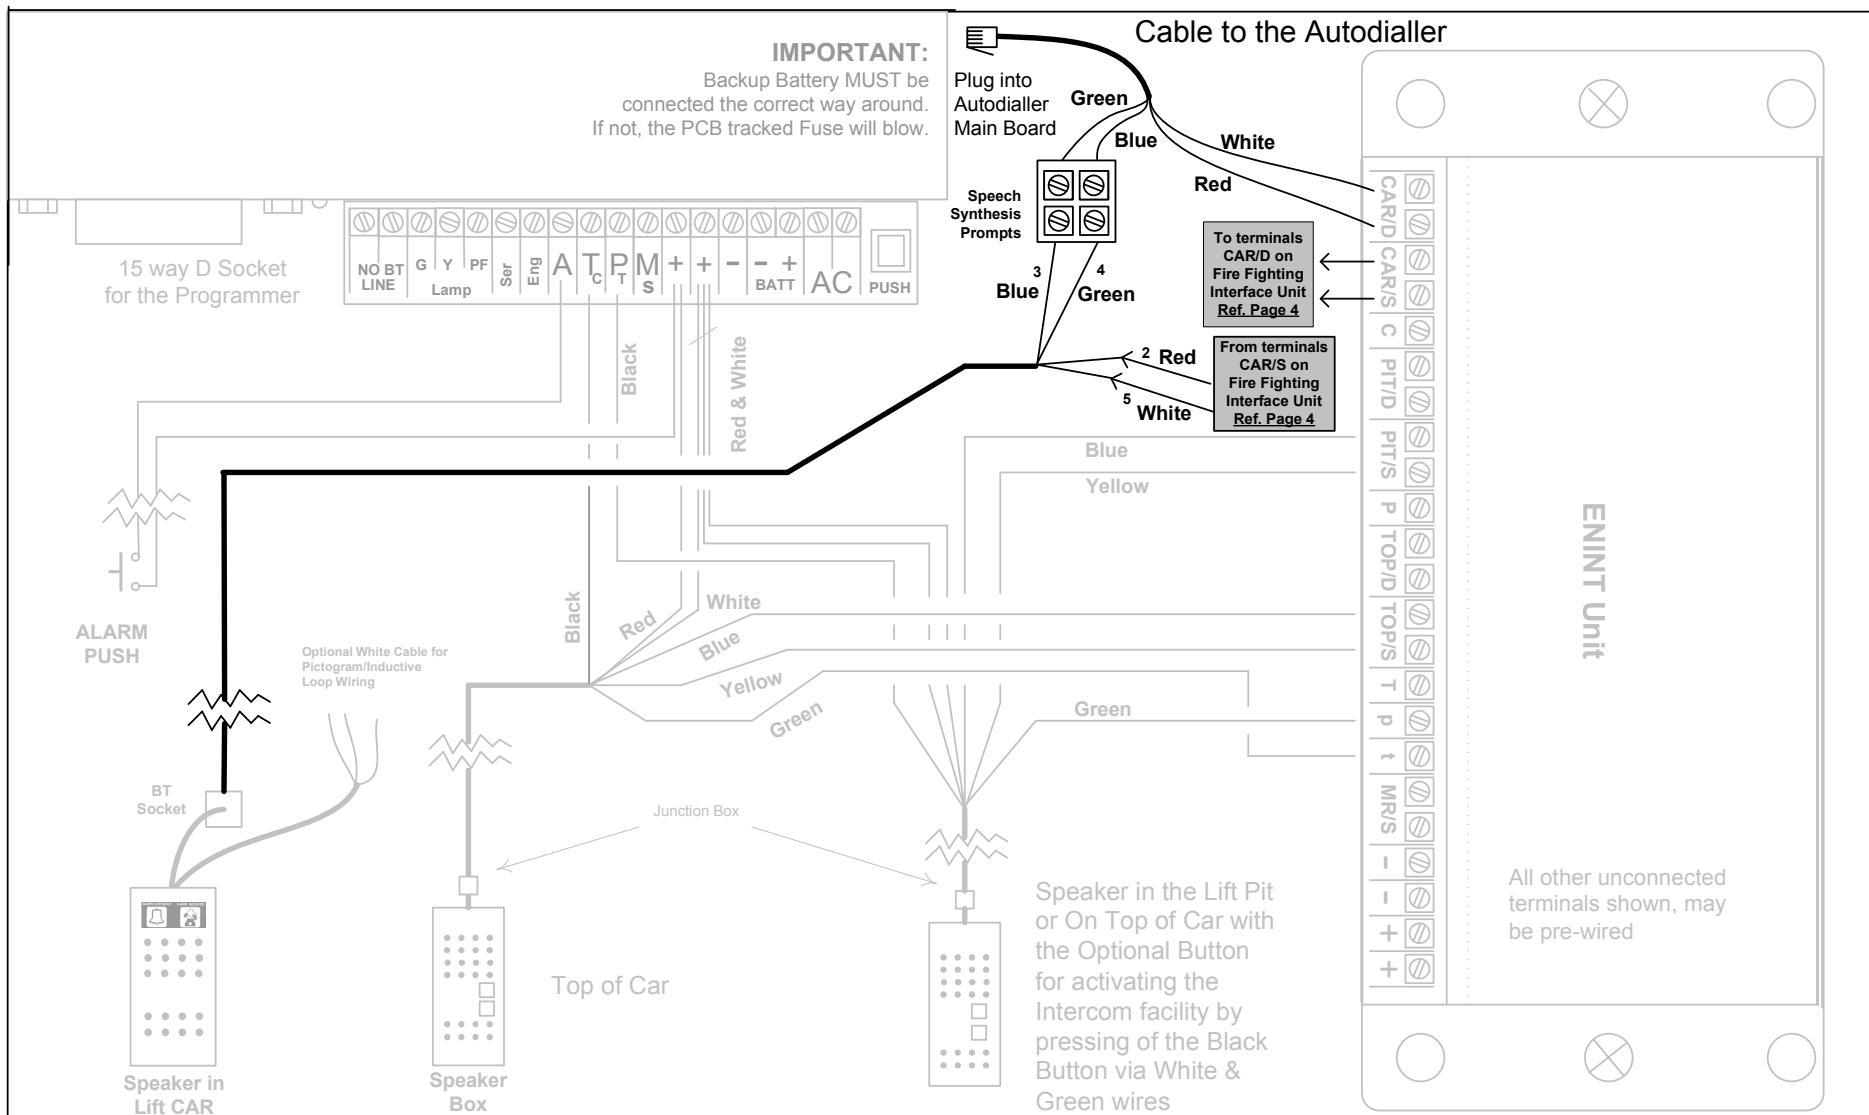


Wiring of the Fire Fighting Interface System to AD1000EN-4R Autodialller

Drawing: FF + EN4 ENINT Date: 09/12/05
Page: 3/6

Windcrest

Tel: 0181 795 0333
Fax: 0181 795 0444

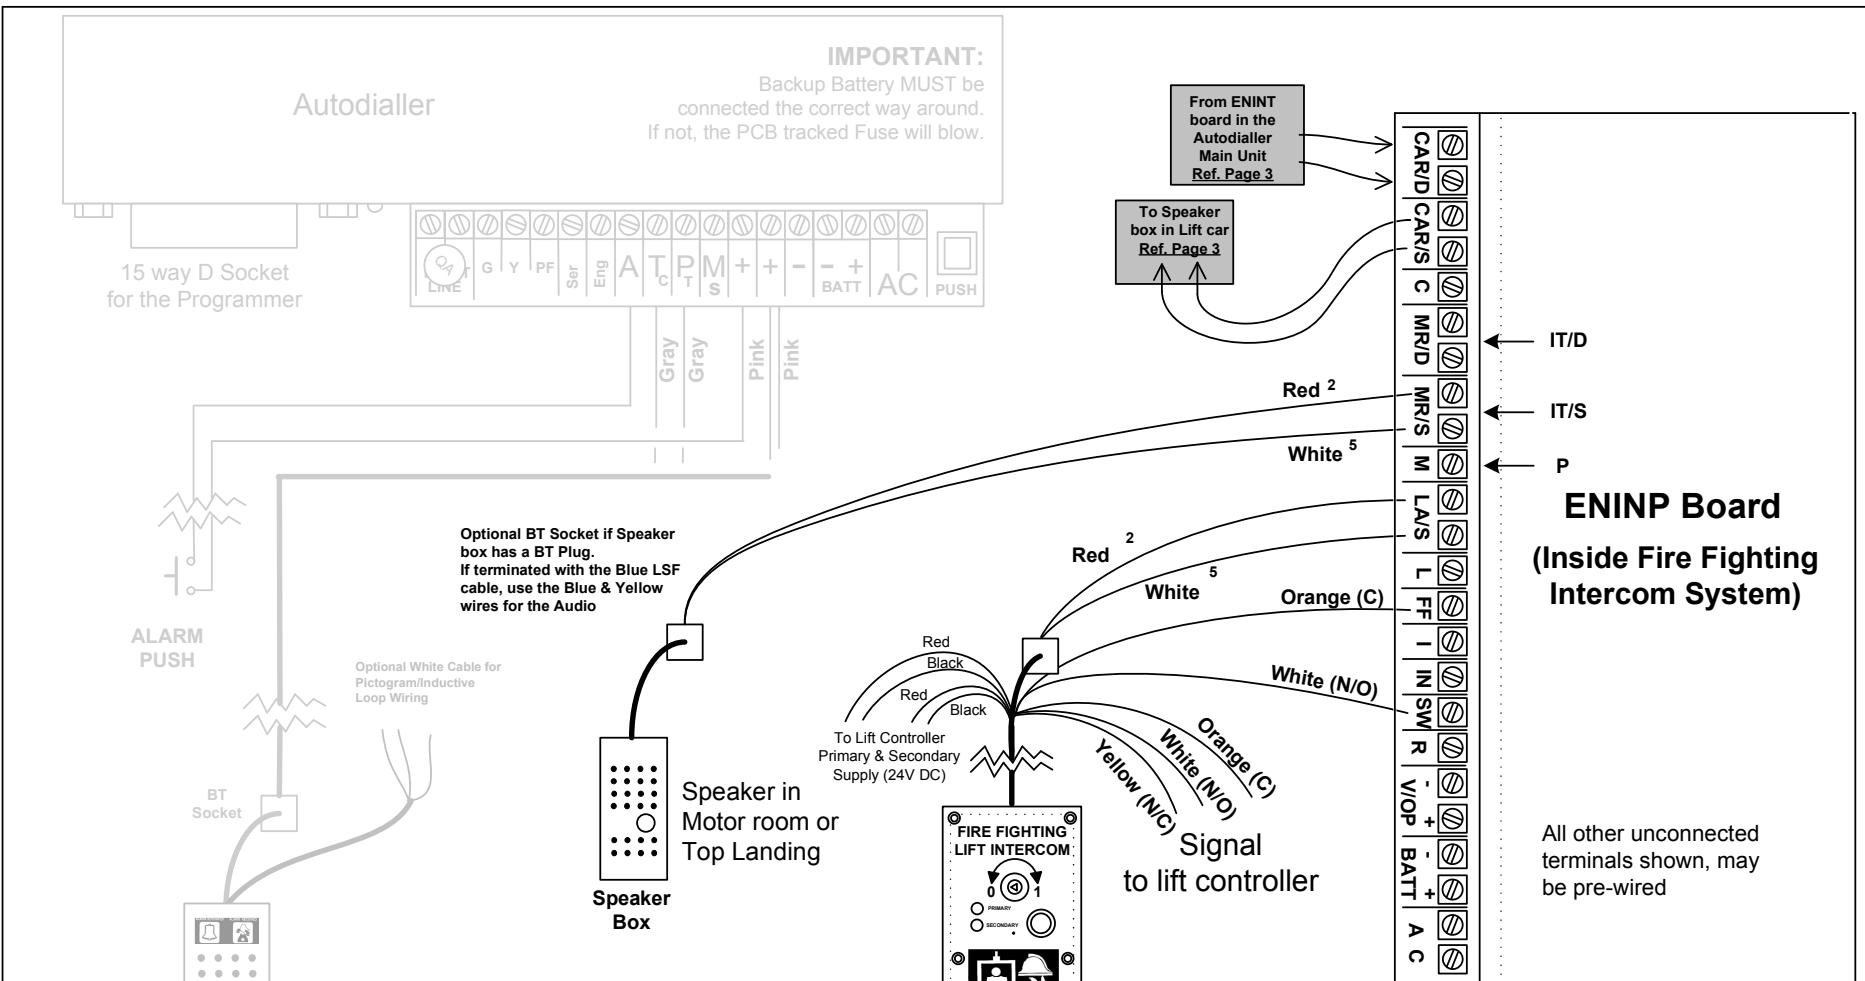


Wiring of the Fire Fighting Interface System to AD1000EN-4R Autodialller

Drawing: FF + EN4
Page: 4/6

Date: 02/04/08
Tel: 0208 795 0333
Fax: 0208 795 0444

Windcrest

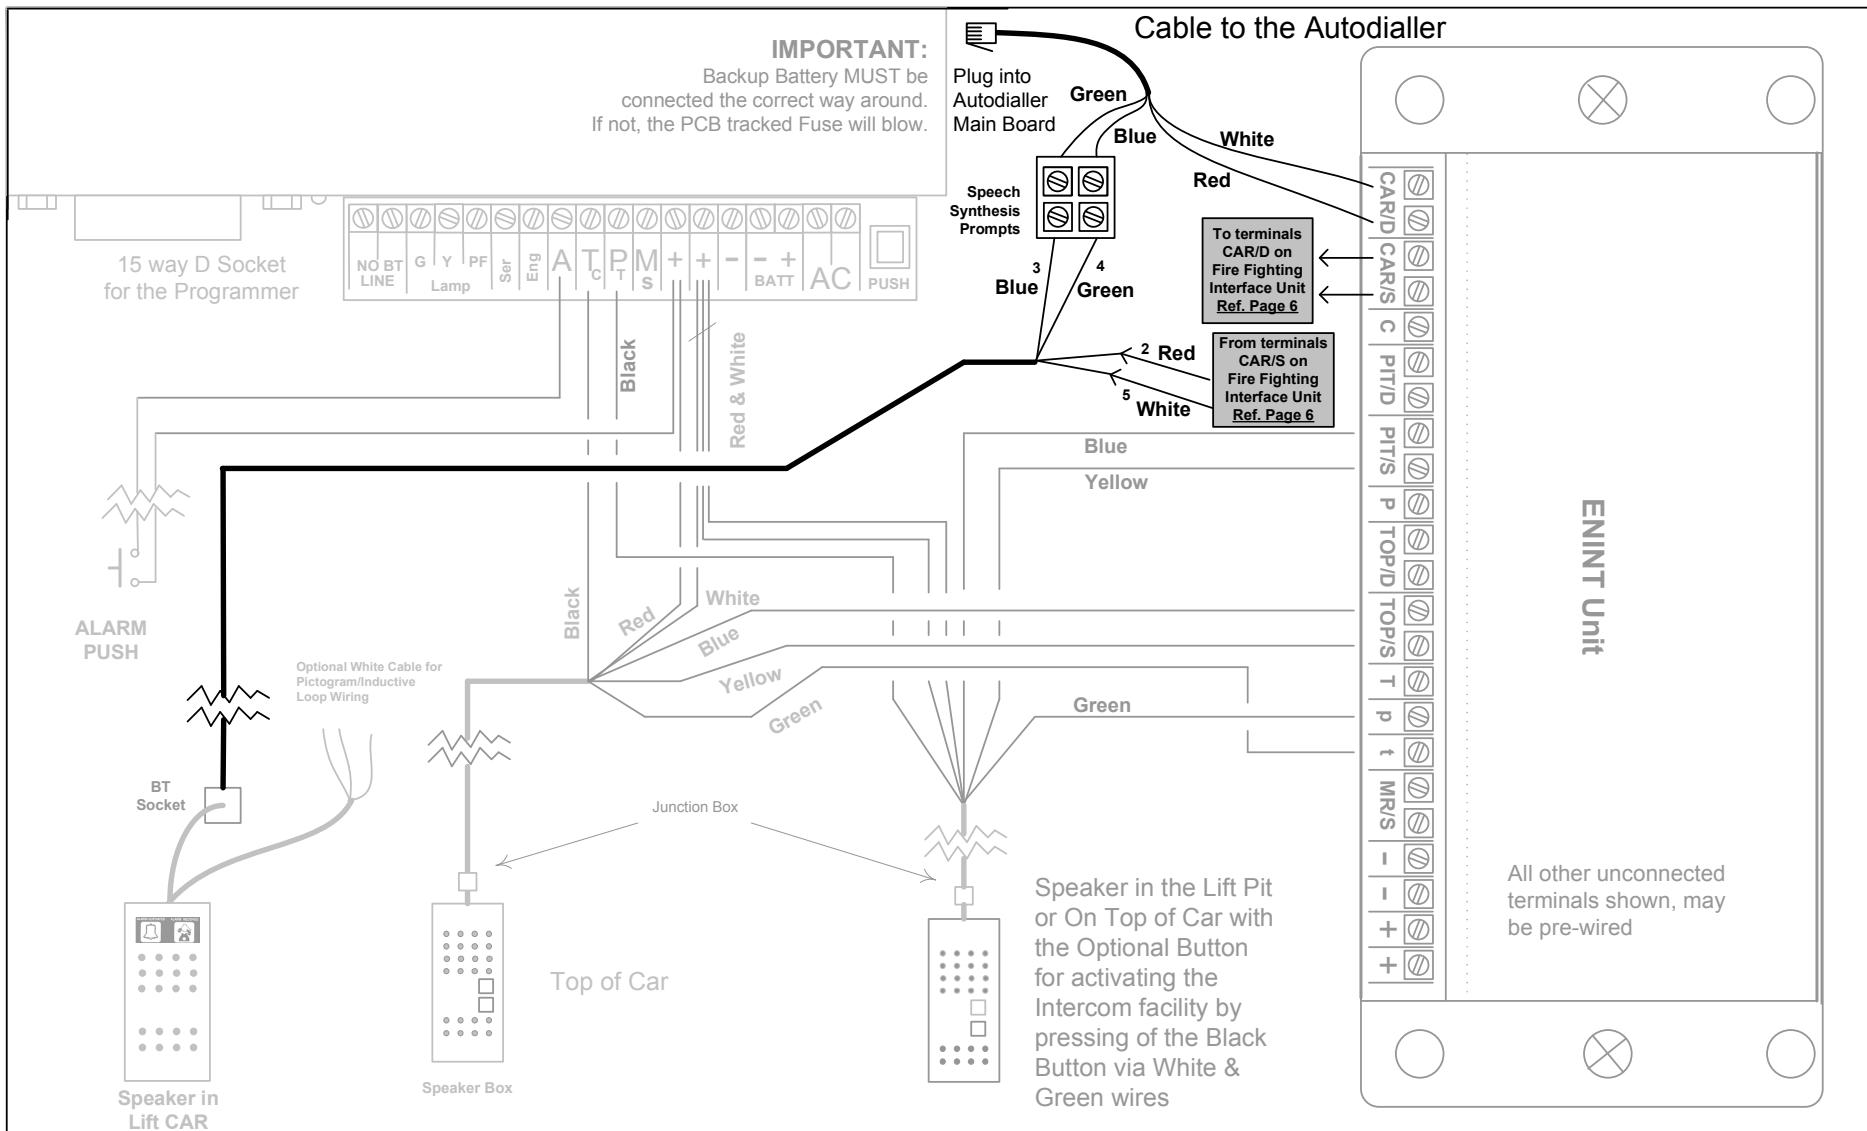

Wiring of the Fire Fighting Interface System to AD1000EN-4R MRL Autodialller

Drawing: FF + EN4 MRL ENINT Date: 09/12/05
Page: 5/6

Windcrest

Tel: 0181 795 0333
Fax: 0181 795 0444

